

HOW TO USE THE KB SAX TENON RECEIVER MEASURING GAUGES

1. Have your saxophone ready with its neck tension screw loosened. Make sure the tenon receiver (where the neck goes in) is clean. If needed, wipe it clean with a little rubbing alcohol on a paper towel.

****Never add oil, cork grease or any other lubricant to the gauges****

Insert the gauges one at a time from smallest to largest pushing all the way in. Size numbers are stamped into the bottom. It is okay if the gauges bottom out slightly early and you see a small gap (1-3mm) between the gauge and the saxophone - some tenon receivers are slightly shorter than others. The largest gauge that bottoms out in your horn is the correct size. The next gauge up in size should only fit partly or not at all into your horn. The correct sized gauge for your horn should have a very snug fit. However, you should still be able to rotate it without using excessive force.

2. You should have at least one gauge that is too large to fit all the way in. If the smallest gauge provided does not fit or if the largest gauge provided still goes all the way in, then give us a call at **212-683-2985**

3. With the best fitting measuring gauge in your saxophone and the neck tension screw still loose, turn the gauge counter clockwise until the stem touches the octave mechanism. Snap a picture like the one here (perpendicular to the stem) and email the picture along with the size of the gauge that best fit your horn to us at **info@kbsax.com**, and you are all set. We will have all we need to send you a neck that is custom fit to your horn.

4. Place the gauges back in the USPS flat rate mailing box. Tape it up well and affix the included prepaid return shipping label to the box. Then drop the box off at the postoffice.

